

Installation Manual



Oreco Systems®
Incorporated

814 AIRWAY AVENUE
SUTHERLIN, OREGON
97479-9012

TELEPHONE:
(541) 459-4449

FACSIMILE:
(541) 459-2884

Most Versatile Panel MVP-SSF1 PTRO/ Manual# EIN-CP-SSF-520

This Manual Contains:

Description

1. Installation Instructions
2. Panel Wiring Diagram
3. Float Arrangement Diagram
4. Float Arrangement Diagram
5. MVP-SSF PTRO/ Operation
6. MVP-SSF PTRO/ Setting Instructions
7. MVP-Time & Date Setting Instructions

Document Number

EIN-CP-GEN-1
EDW-WD-SSF-104
EDW-FA-SSF-110
EDW-FA-SSF-215
EIN-CP-OP-68
EIN-CP-SET-60
EIN-CP-SET-111

Panel Installation



Oreco Systems®
Incorporated

Before Installing Panel

1. *Read all instructions before proceeding with the installation. Improper installation may void warranties.*
2. Inspect your order for completeness and inspect each component for shipment damage. If something is missing or damaged, you will need to contact your supplier to obtain replacements.
3. Check to be sure the instructions and items supplied comply with state and local regulations.
4. A qualified electrician must be employed to install and service the panel and ancillary wiring. The equipment must be installed in compliance with the National Electric Code, as well as state and local codes.

814 AIRWAY AVENUE
SUTHERLIN, OREGON
97479-9012

TELEPHONE:
(541) 459-4449

FACSIMILE:
(541) 459-2884

Placement of the Control Panel

5. Install the electrical control or alarm panel within view of the tank. The panel should be attached to a post or an exterior wall. Panels that contain motor contactors make a thumping sound, each time a pump is started or stopped. Therefore, these panels should not be mounted to an exterior wall unless it is in a location away from living areas, such as on a garage wall. If possible, position the panel in the shade to protect it from weather. Extreme temperatures can cause inconsistent performance of the electrical components. Locate the panel at a convenient height (usually about five feet above the ground) and where it will be accessible for maintenance.

Install Floats and Pumps

6. Install the electrical splice box(es) for the floats and pump(s) before installing the actual floats and pumping equipment. The splice box(es) are installed in the grommet(s) provided near the top of the riser.
7. Install the floats. Thread the float and pump cords through the cord grips into the PVC splice box, leaving adequate lengths of electrical cord coiled inside the riser to allow easy removal of the pump and float assembly. Do not remove the colored markers or the paper tags from the float cords, and do not try to thread the markers and tag through the cord grip. These should be left on the float cord, outside the splice box. Tighten the cord grips, using hand pressure or a wrench if necessary, until the cord will no longer move in the cord grip. If the cord grips are not tight enough, the seal will not be watertight, but overtightening may damage the cord or the cord grip, so use only as much force as necessary. Adequate lengths of cord should be left within the splice box to allow for easy removal for future disconnecting and re-splicing.
8. Run the wires from the control panel to the splice box. The wires can be brought through a conduit, or can be buried using suitable direct-burial wire. Conduit that enters the splice box must be sealed, even if the wires are direct-buried, to prevent the infiltration of water into the splice box. Use an electrically approved sealant to plug the wires coming in through the conduit hub. The number of wires required depends on the control panel and the number of floats and pumps used. This can be determined by consulting the Float Arrangement diagram appropriate for the control panel and float arrangement being used.

Wire should be sized at 14 AWG for the floats. Refer to Figure 1 to determine the proper size for the pump wires. When calculating wire size, the length and size of the branch circuit wires from the service entrance panel to the pump control panel must also be taken into account. Wire that's too small can cause an excessive voltage drop and poor pump performance.

Wires should be color coded or otherwise marked to aid in wiring the control panel. Drawing EIN-SB-SB-1 lists recommended colors for each of the wires. Colors may refer to either the color of the wire's insulation, the color of a tag, or the color of an electrical tape marker.

9. All splices made in the splice box should use waterproof wire nuts or butt connectors and heat shrink tubing. The splices must be waterproof! Splices that are not waterproof may cause a malfunction of the pump controls if water should leak into the splice box. Refer to Drawing EIN-SB-SB-1 for instructions on making waterproof splices. Refer to the appropriate Float Arrangement diagram for instructions on how to connect the floats together.

Connect Control Panel

10. Connect the wires coming from floats to the terminals in the control panel. Refer to the appropriate Float Arrangement diagram for the correct terminal connections.

11. Connect the wires coming from the pump(s) to the pump terminals. Refer to the panel wiring diagram for the correct terminal connections.

12. Connect the incoming power to the panel. Power to the panel must be appropriate to the control panel and pump motor (i.e. 120VAC, single phase for a 120 VAC motor, 240 VAC single phase for a 240 VAC motor, etc.) Insure that the panel is properly grounded and that the fuse or breaker and wire size, from the main power panel and to the pump, are sized correctly. Separate circuits for the pump controls and each of the pump motors is recommended. Note: Voltage for the controls in the panel is always 120VAC, although the pump voltage may be 120VAC or 240 VAC.

13. Use 60° minimum CU conductors only. Torque the terminal blocks to 15 LB-IN and the ground lugs to 45 LB-IN. Torque the circuit breakers to 20 LB-IN for 14-10 AWG wire, 25 LB-IN for 8 AWG wire, and 27 LB-IN for 6-4 AWG wire.

14. When power is applied to the control panel, the wires to the pump may be energized. Do not service the pump or any electrical wiring in the pump vault without disconnecting the power at the circuit breaker and the fuse. The pump vault area is a hazardous area, and may contain explosive gases. Take appropriate precautions before working in the pump vault.

15. If you have any questions please contact Orenco Systems, Inc.

Figure 1. Recommended Breaker & Wire Size

<u>Pump Motor Size</u>	<u>Breaker size</u>	<u>Wire Size</u>	<u>Max Distance*</u>
120 VAC 1/2 hp	20 amp	10 AWG	105 ft
240 VAC 1/2 hp	15 amp	14 AWG	161 ft
3/4 hp	20 amp	14 AWG	130 ft
1 hp	20 amp	12 AWG	172 ft
1 1/2 hp	20 amp	12 AWG	126 ft

* This is the maximum distance from this subpanel to the pump motor for the recommended wire size. Distance is based on 3% maximum voltage drop from subpanel to load at maximum recognized pump motor amps at 75° C.

Control Panel Wiring Diagram Model MVP-SSF1 PTR0/



Oreco Systems
Incorporated


814 AIRWAY AVENUE
SUTHERLIN, OREGON
97479-9012

TELEPHONE:
(541) 459-4449

FACSIMILE:
(541) 459-2884

From Main Power Panel
115 VAC, 1 Phase, 60 Hz.
Main disconnect
provided by others.

— = Factory Wire
- - - = Field Wire

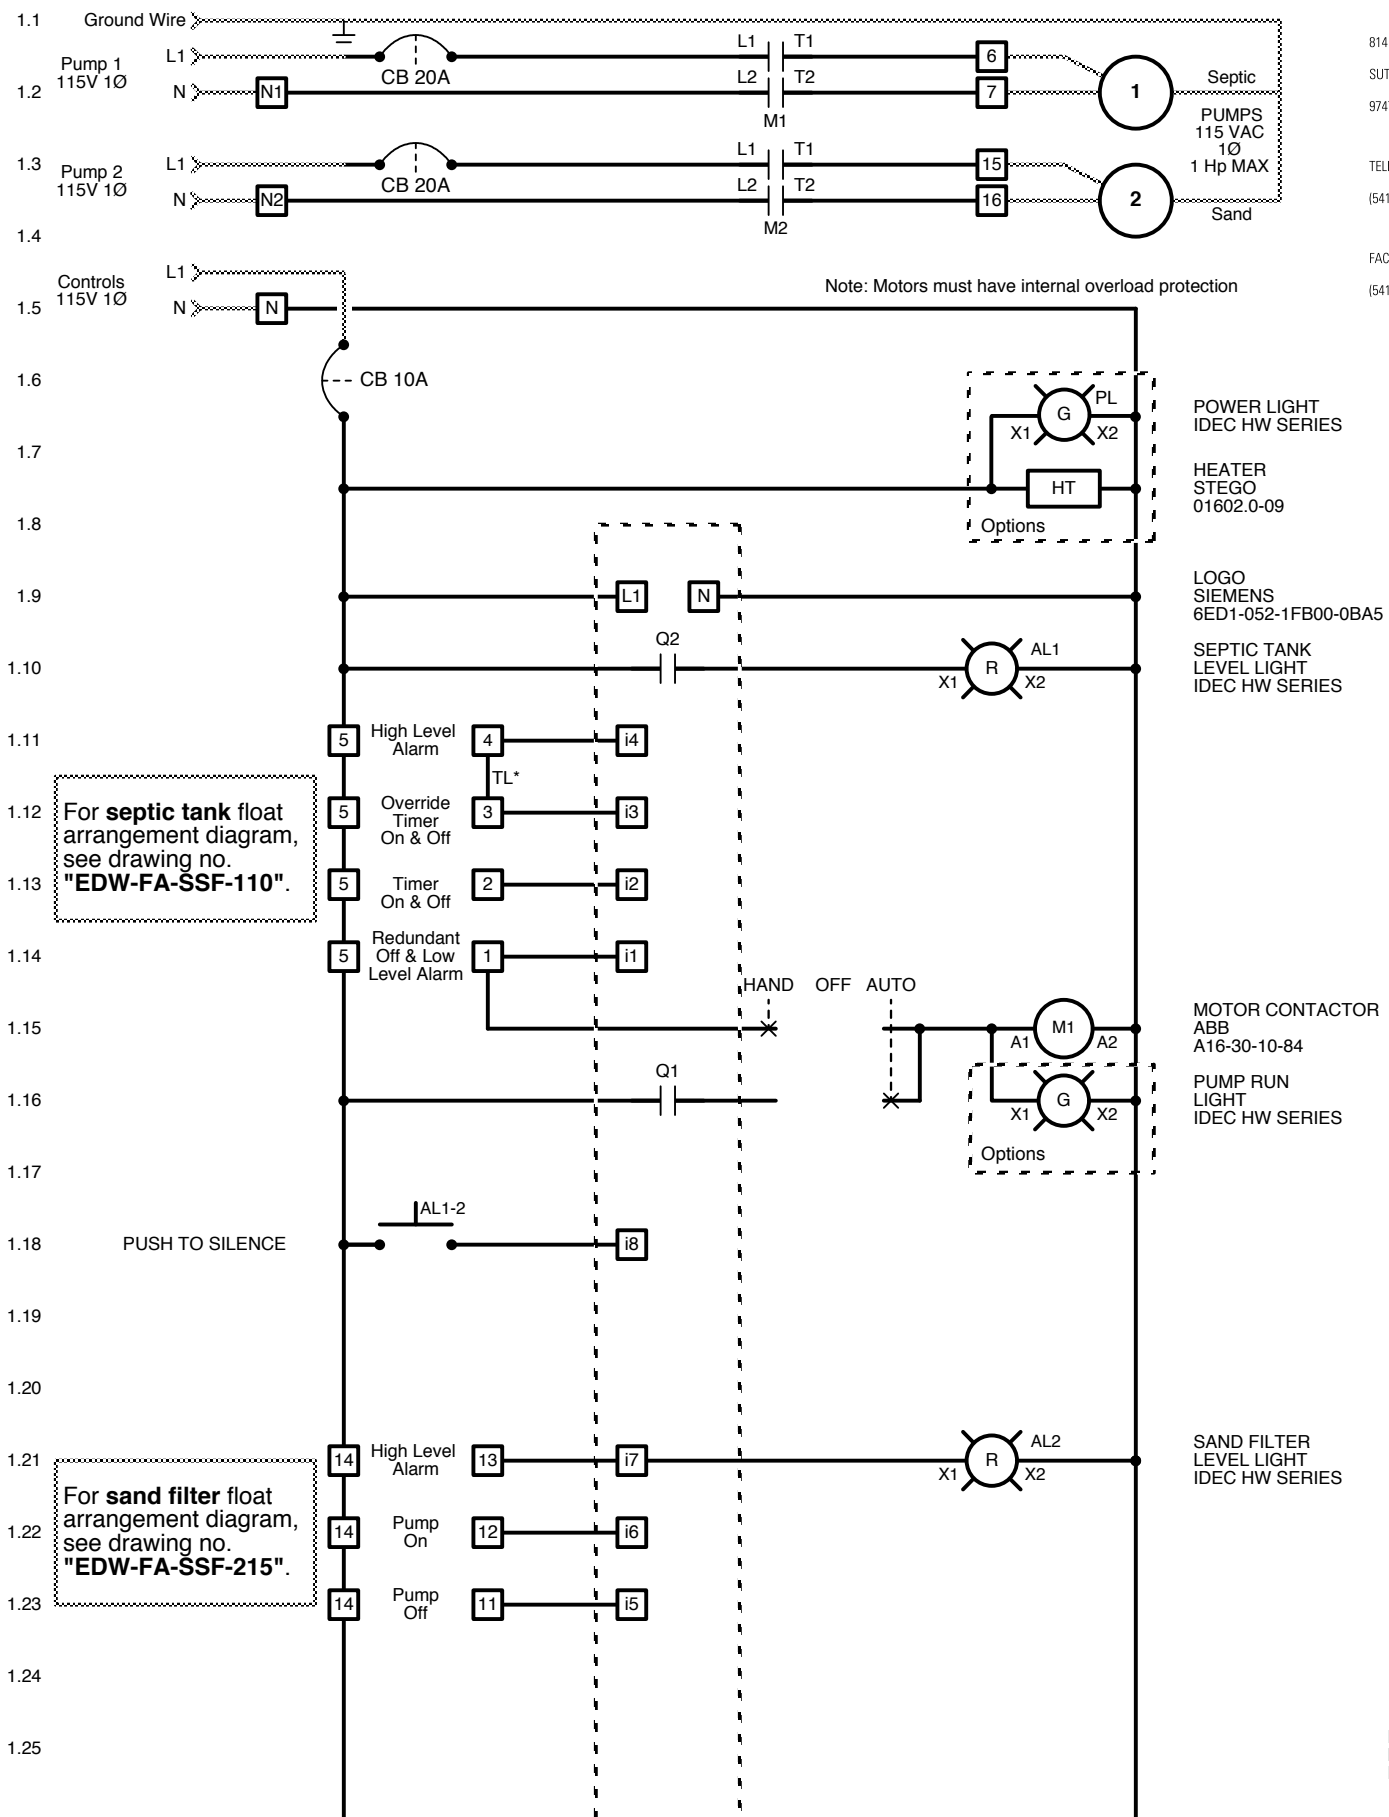

Note: Motors must have internal overload protection

For septic tank float arrangement diagram, see drawing no. "EDW-FA-SSF-110".

For sand filter float arrangement diagram, see drawing no. "EDW-FA-SSF-215".

POWER LIGHT
IDEC HW SERIES

HEATER
STEGO
01602.0-09

LOGO
SIEMENS
6ED1-052-1FB00-0BA5


SEPTIC TANK
LEVEL LIGHT
IDEC HW SERIES

MOTOR CONTACTOR
ABB
A16-30-10-84



PUMP RUN
LIGHT
IDEC HW SERIES

SAND FILTER
LEVEL LIGHT
IDEC HW SERIES

2.1
2.2
2.3
2.4
2.5
2.6
2.7
2.8
2.9
2.10
2.11
2.12
2.13
2.14
2.15
2.16
2.17
2.18
2.19
2.20
2.21
2.22
2.23
2.24
2.25
2.26
2.27

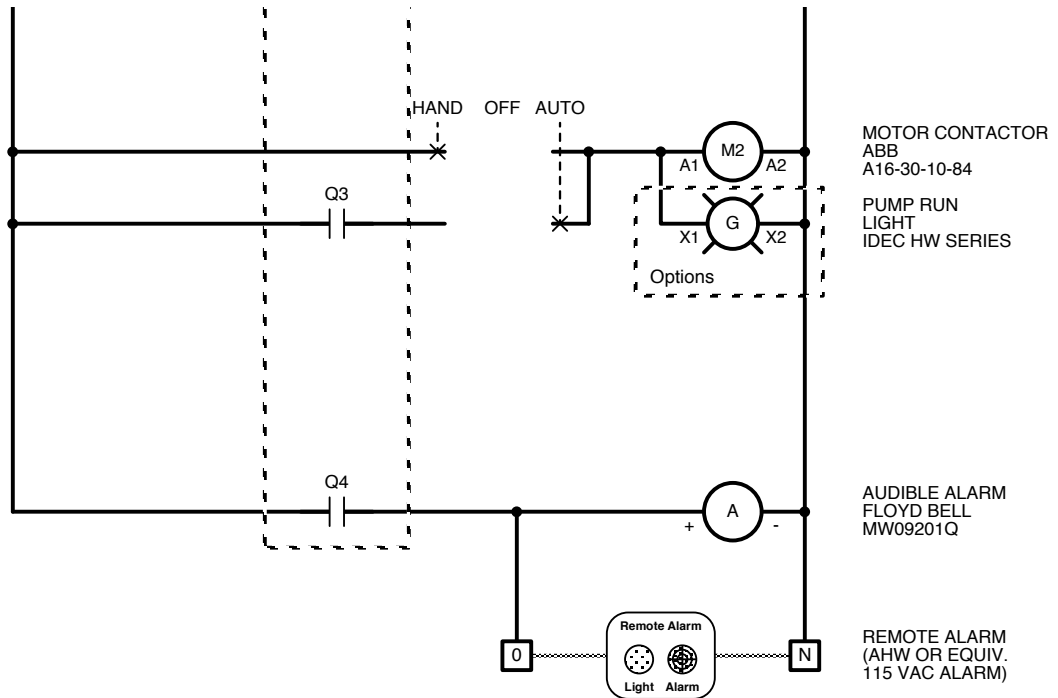

For MVP-SSF operation description, see drawing no. "EIN-CP-OP-68".

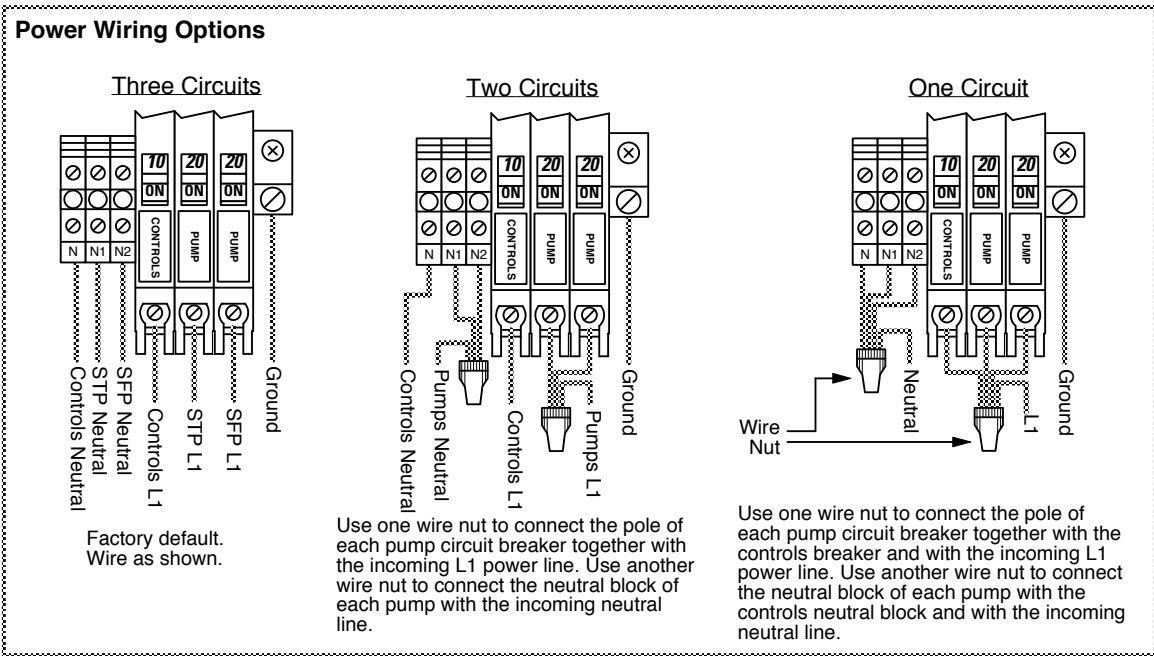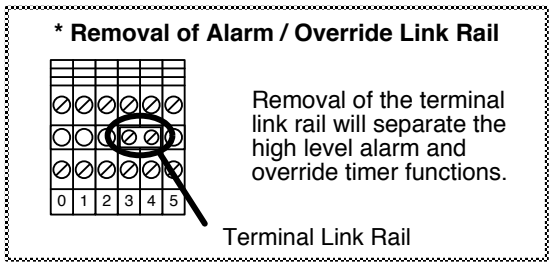

Float Arrangement Diagram



Oreco Systems®
Incorporated

814 AIRWAY AVENUE
SUTHERLIN, OREGON
97479-9012

TELEPHONE:
(541) 459-4449

FACSIMILE:
(541) 459-2884

Check the appropriate box for the float function (color code) used in your system.

<p><input type="checkbox"/> (YG)RW • <i>Factory Standard</i> •</p> <p>*Terminal Link Rail is required (factory installed).</p> <p>For a wire splicing illustration of the above diagram, request Splice Box Wiring Diagram: EDW-SB-SSF-125</p>	<p><input type="checkbox"/> YRW</p> <p>*Remove pre-installed Terminal Link Rail from terminals. See Panel Wiring Diagram for instructions.</p> <p>For a wire splicing illustration of the above diagram, request Splice Box Wiring Diagram: EDW-SB-SSF-126</p>	<p><input type="checkbox"/> YGRW</p> <p>*Remove pre-installed Terminal Link Rail from terminals. See Panel Wiring Diagram for instructions.</p> <p>For a wire splicing illustration of the above diagram, request Splice Box Wiring Diagram: EDW-SB-SSF-127</p>
---	---	--

Float Types

Typical Oreco float model: A
Specs: contact - normally open
differential - no minimum
power rating - signal
Possible substitutions: B,C,D

A high level condition in the sand filter will disable the septic tank pump in auto mode.

Control Panel Series

MVP-SSF PT RO /

For use in two pump systems, septic tank side.

Drawing No.

EDW-FA-SSF-110

EDW-FA-SSF-110
Rev 1.4 © 08/28/02

Splice Box Wiring Diagram

For use in two pump systems, septic tank side.



Oreco Systems
Incorporated

814 AIRWAY AVENUE

SUTHERLIN, OREGON


97479-9012

TELEPHONE:






(541) 459-4449

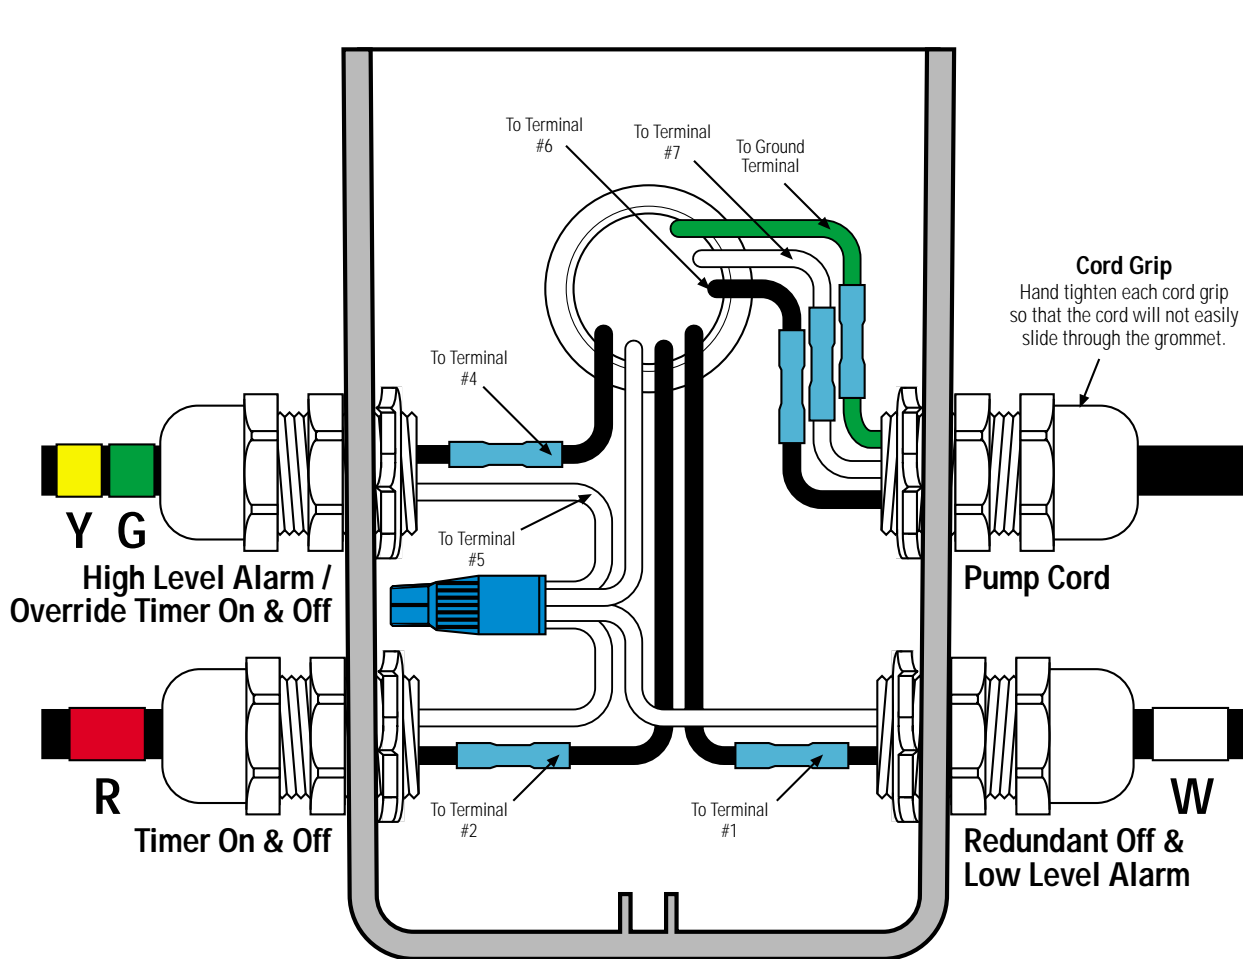FACSIMILE:

(541) 459-2884



Key

-  Black Wire
-  White Wire
-  Green Wire
-  Waterproof Wire Nut
-  Heat Shrink & Butt Connector *

* Refer to drawing EIN-SB-SB-1 for splicing instructions.

Float Tag Colors

- Y** - Yellow
- P** - Purple
- B** - Blue
- G** - Green
- R** - Red
- O** - Orange
- E** - Grey
- W** - White

Note: Multi-function floats will have more than one marker

Attention: Failure to follow splicing instructions will void warranty

Control Panel Series

MVP-SSF PT RO /

Float Function Color Code

(YG)RW /

Splice Box Model

SB4

Drawing No.

EDW-SB-SSF-125

EDW-SB-SSF-125
Rev 1.0 ©10/05/98

Splice Box Wiring Diagram

For use in two pump systems, septic tank side.



Oreco Systems
Incorporated

814 AIRWAY AVENUE

SUTHERLIN, OREGON


97479-9012

TELEPHONE:


 



(541) 459-4449

FACSIMILE:

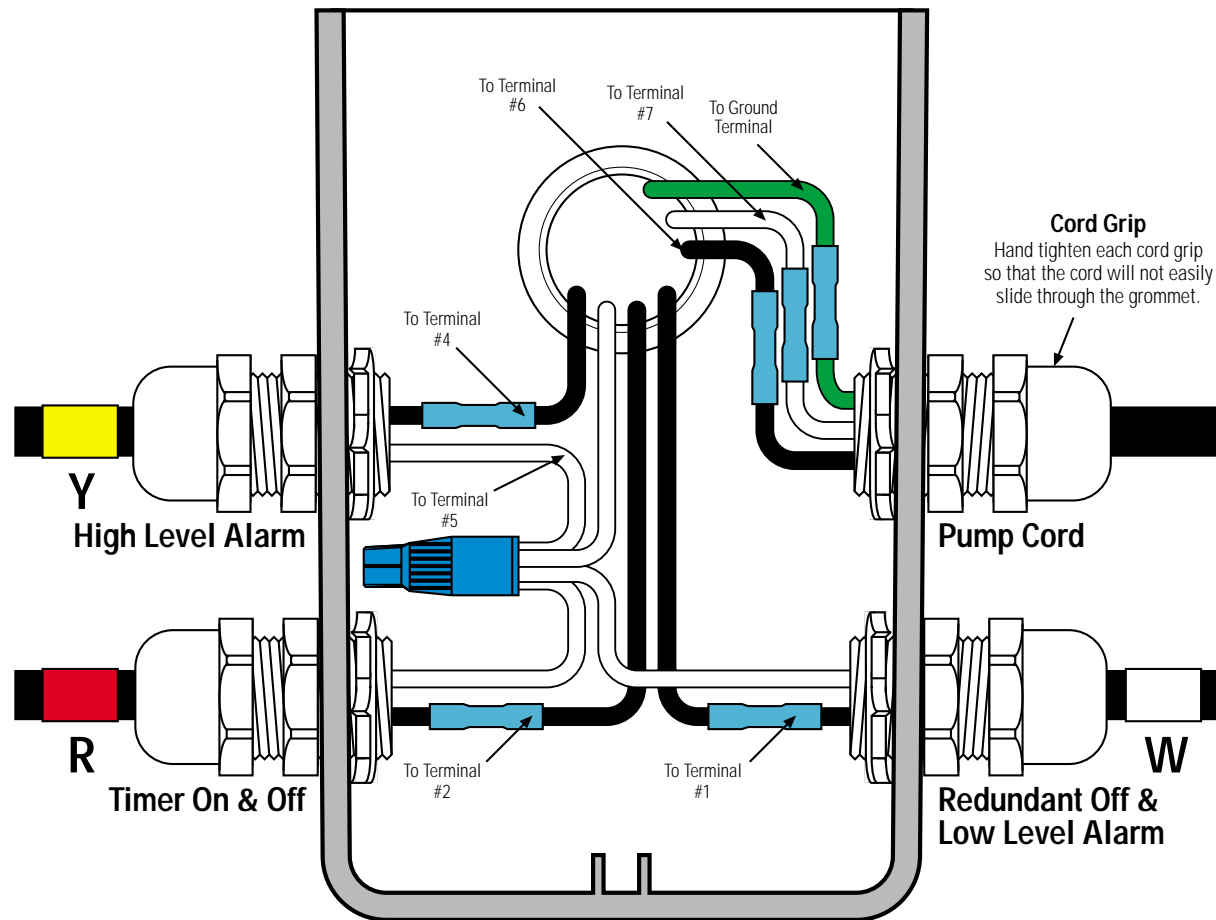(541) 459-2884



Key

-  Black Wire
-  White Wire
-  Green Wire
-  Waterproof Wire Nut
-  Heat Shrink & Butt Connector *

* Refer to drawing EIN-SB-SB-1 for splicing instructions.

Float Tag Colors

- Y** - Yellow
- P** - Purple
- B** - Blue
- G** - Green
- R** - Red
- O** - Orange
- E** - Grey
- W** - White

Note: Multi-function floats will have more than one marker

Attention: Failure to follow splicing instructions will void warranty

Control Panel Series

SSF PT RO/

Float Function Color Code

YRW/

Splice Box Model

SB4

Drawing No.

EDW-SB-SSF-126

EDW-SB-SSF-126
Rev 1.0 ©07/06/99

Splice Box Wiring Diagram

For use in two pump systems, septic tank side.



Oreco Systems
Incorporated

814 AIRWAY AVENUE

SUTHERLIN, OREGON


97479-9012

TELEPHONE:


 



(541) 459-4449

FACSIMILE:

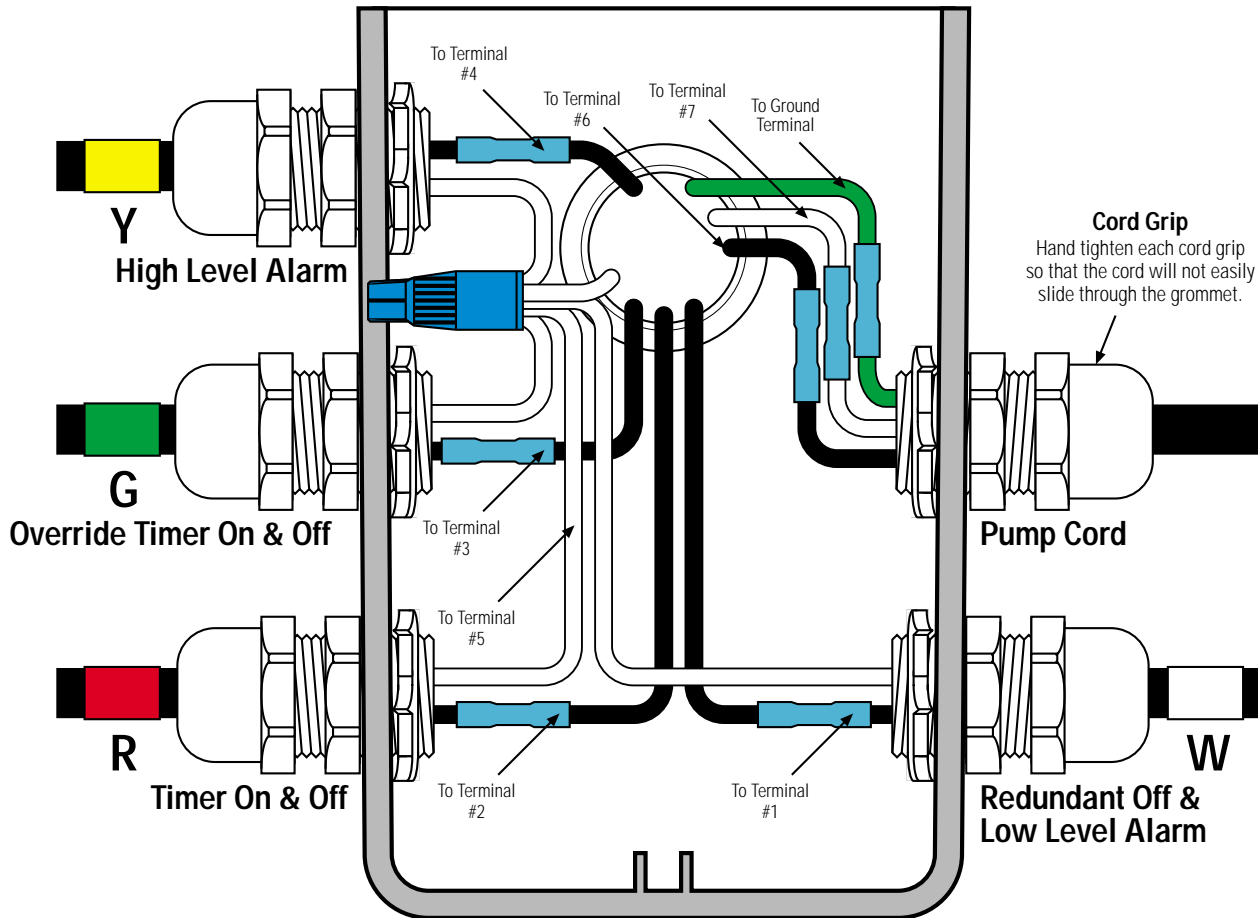(541) 459-2884



Key

-  Black Wire
-  White Wire
-  Green Wire
-  Waterproof Wire Nut
-  Heat Shrink & Butt Connector *

* Refer to drawing EIN-SB-SB-1 for splicing instructions.

Float Tag Colors

- Y** - Yellow
- P** - Purple
- B** - Blue
- G** - Green
- R** - Red
- O** - Orange
- E** - Grey
- W** - White

Note: Multi-function floats will have more than one marker

Attention: Failure to follow splicing instructions will void warranty

Control Panel Series

MVP-SSF PT RO /

Float Function Color Code

YGRW /

Splice Box Model

SB5

Drawing No.

EDW-SB-SSF-127

EDW-SB-SSF-127
Rev 1.0 ©06/17/99

Float Arrangement Diagram





Oreco Systems®
Incorporated

814 AIRWAY AVENUE
SUTHERLIN, OREGON
97479-9012

TELEPHONE:
(541) 459-4449

FACSIMILE:
(541) 459-2884

Check the appropriate box for the float function (color code) used in your system.

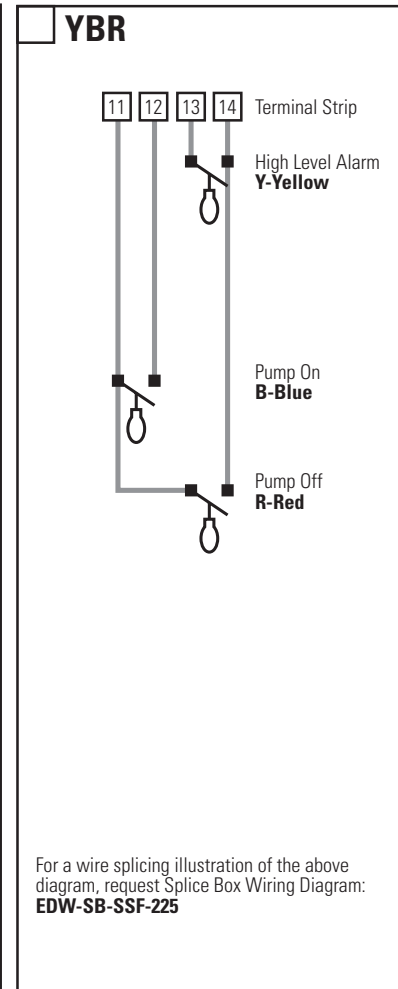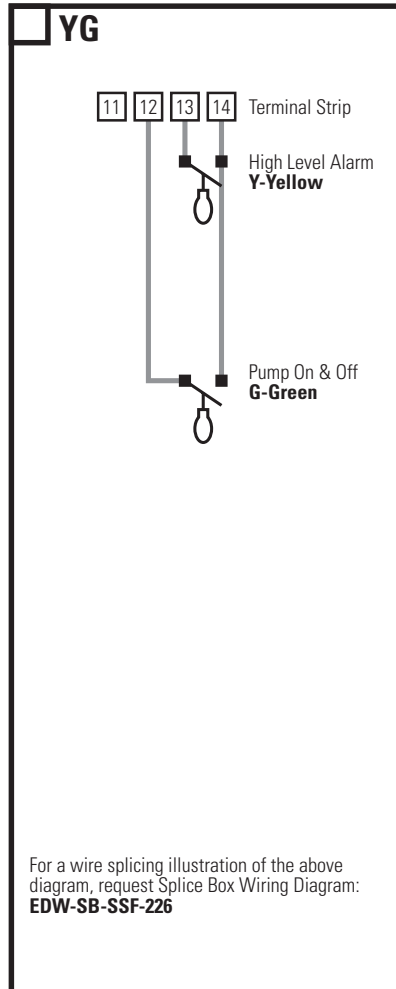

Float Types

- **Typical Oreco float model: A**
- **Specs:** contact - normally open
differential - no minimum
power rating - signal
- **Possible substitutions:** B,C,D

Important: A high level condition in the sand filter will disable the septic tank pump in automatic mode.

Control Panel Series

MVP-SSF

For use in two pump systems, sand filter side.

Drawing No.

EDW-FA-SSF-215

EDW-FA-SSF-215
Rev 1.2 © 08/28/02

Splice Box Wiring Diagram

For use in two pump systems, sand filter side.



Oreco Systems®
Incorporated

814 AIRWAY AVENUE

SUTHERLIN, OREGON


97479-9012

TELEPHONE:


 



(541) 459-4449

FACSIMILE:

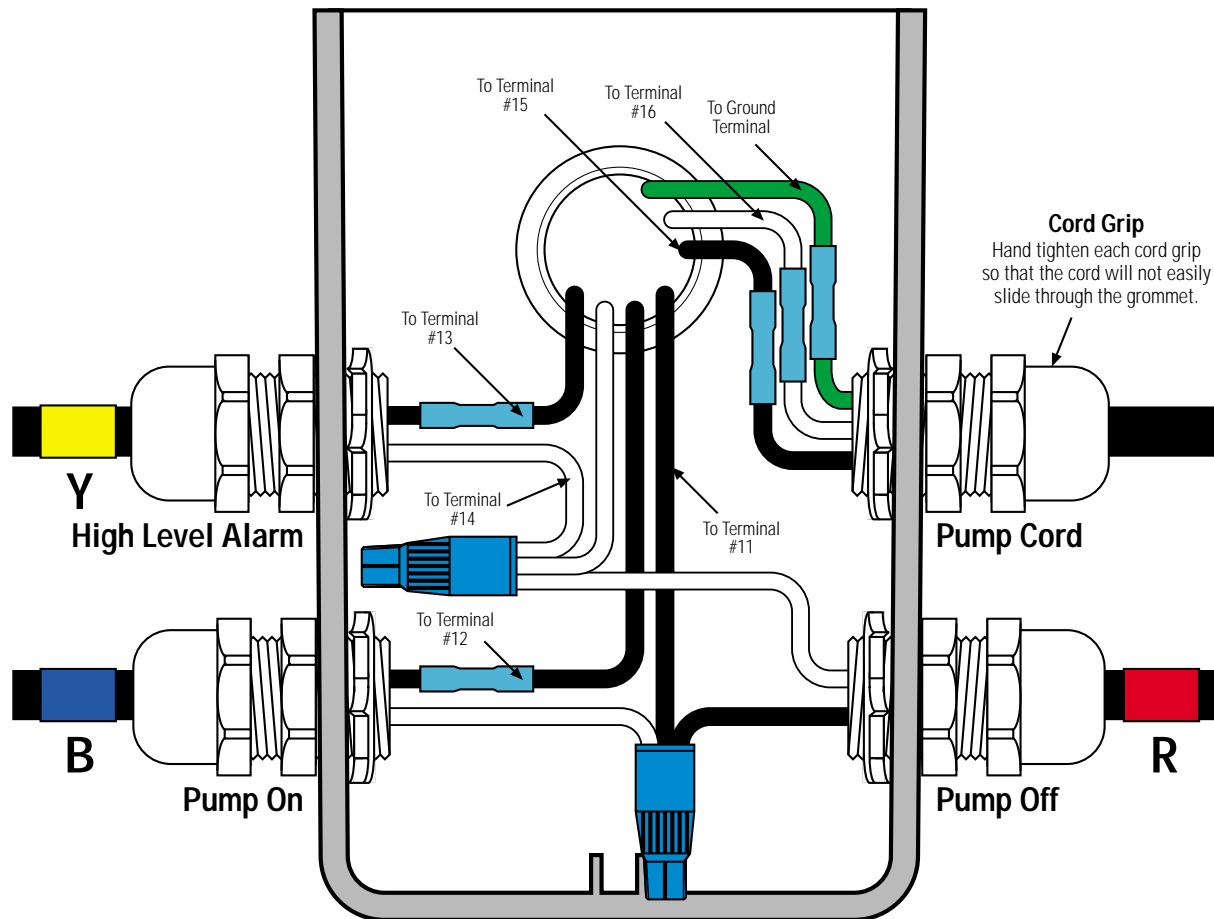(541) 459-2884



Key

-  Black Wire
-  White Wire
-  Green Wire
-  Waterproof Wire Nut
-  Heat Shrink & Butt Connector *

* Refer to drawing EIN-SB-SB-1 for splicing instructions.

Float Tag Colors

- Y** - Yellow
- P** - Purple
- B** - Blue
- G** - Green
- R** - Red
- O** - Orange
- E** - Grey
- W** - White

Note: Multi-function floats will have more than one marker

Attention: Failure to follow splicing instructions will void warranty

Control Panel Series

MVP-SSF PTR0/

Float Function Color Code

/YBR

Splice Box Model

SB4

Drawing No.

EDW-SB-SSF-225

EDW-SB-SSF-225
Rev 1.0 ©07/30/99

Splice Box Wiring Diagram

For use in two pump systems, sand filter side.



Oreco Systems®
Incorporated

814 AIRWAY AVENUE

SUTHERLIN, OREGON


97479-9012

TELEPHONE:


 



(541) 459-4449

FACSIMILE:

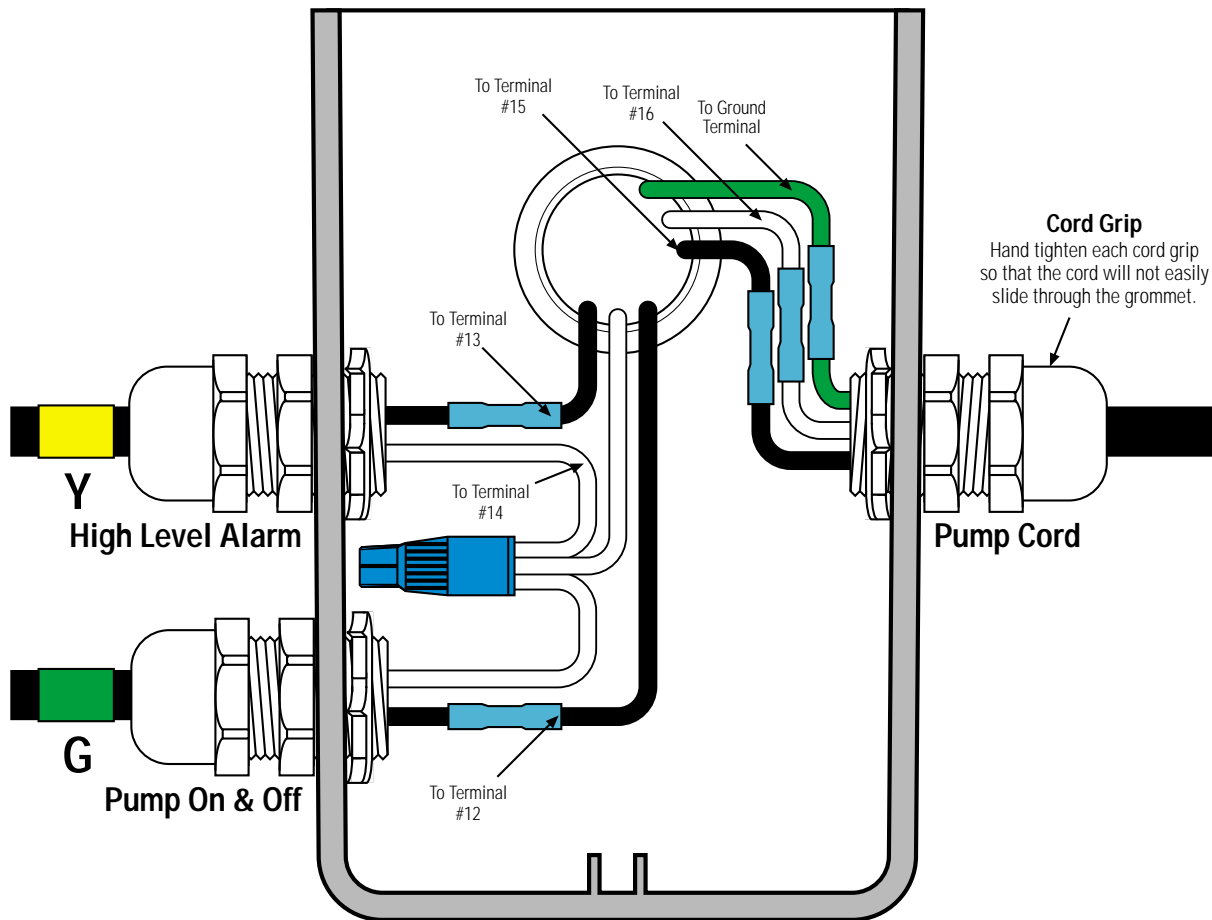(541) 459-2884



Key

-  Black Wire
-  White Wire
-  Green Wire
-  Waterproof Wire Nut
-  Heat Shrink & Butt Connector *

* Refer to drawing EIN-SB-SB-1 for splicing instructions.

Float Tag Colors

- Y** - Yellow
- P** - Purple
- B** - Blue
- G** - Green
- R** - Red
- O** - Orange
- E** - Grey
- W** - White

Note: Multi-function floats will have more than one marker

Attention: Failure to follow splicing instructions will void warranty

Control Panel Series

MVP-SSF PTR0/

Float Function Color Code

/ YG

Splice Box Model

SB3

Drawing No.

EDW-SB-SSF-226

EDW-SB-SSF-226
Rev 1.0 ©07/30/99

MVP-SSF PTR0/ Operation



Oreco Systems®
Incorporated

814 AIRWAY AVENUE
SUTHERLIN, OREGON
97479-9012


TELEPHONE:
(541) 459-4449

FACSIMILE:
(541) 459-2884

Oreco's Most Versatile Panel (MVP) line of control panels includes an easy-to-use programmable logic unit that incorporates many timing and logic functions. The units have built in screens which show the time and date, digital input status, digital output status, analog input status (3 screens), analog output status, memory flag status and an ESC + Cursor key status. (The analog input status, analog output status, memory flag status and ESC + Cursor key status screens are not used in this application.) Additionally, the following system data screens have been included in your panel:

System Data Screens:	Description:
1. T Pump CT & ETM	Septic tank pump cycle counter at top of screen and pump run time in minutes beneath
2. F Pump CT & ETM	Sand filter pump cycle counter at top of screen and pump run time in minutes beneath
3. T HLA CT & T OVR CT	Septic tank high level alarm counter at top of screen and override cycle counter beneath
4. T LLA CT & T TimrFlt CT	Septic tank low level alarm counter at top of screen and timer float counter beneath
5. F HLA CT	Sand filter high level alarm counter
6. Power Faults & Operating Hr	Power fault counter at top of screen and operating hours beneath

To move between screens, use the four arrow keys. The screens are accessed as shown below:

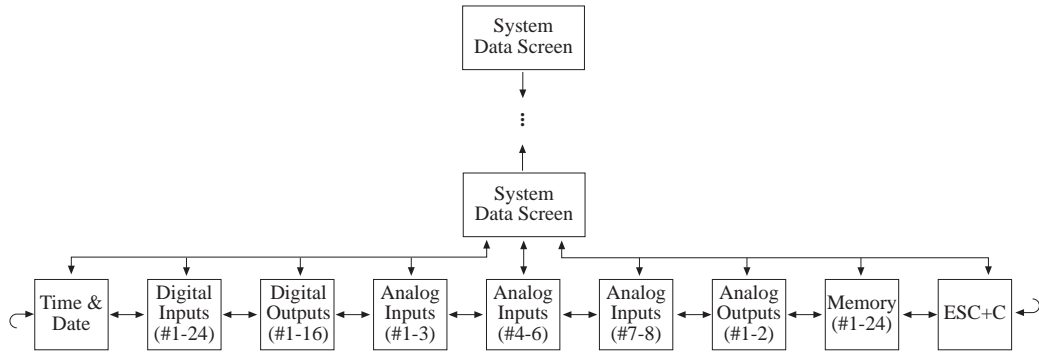

Digital Input and Digital Output Screens: The unit will activate various inputs and outputs as it operates (please refer to the Liquid Crystal Display screens shown below). Knowing what conditions cause the inputs and outputs to activate can be a helpful installation and troubleshooting tool. The following inputs and outputs have been used with your control panel:

Input Functions:

1. Septic Redundant Off & Low Level Alarm Float
2. Septic Timer On & Off Float
3. Septic Override Timer On & Off Float
4. Septic High Level Alarm Float
5. Sand Pump Off Float
6. Sand Pump On Float
7. Sand High Level Alarm Float
8. Push To Silence

Activation Conditions:


- Float in up position
- Float in up position
- Float in up position
- Float in up position
- Float in up position
- Float in up position
- Float in up position
- Pushbutton is pressed

Output Functions:

1. Septic Tank Pump
2. Septic Level Alarm Light
3. Sand Filter Pump
4. Audible Alarm

Activation Conditions:

- Septic Tank Pump is activated
- Septic Level Alarm Light is activated
- Sand Filter Pump is activated
- Audible Alarm is activated

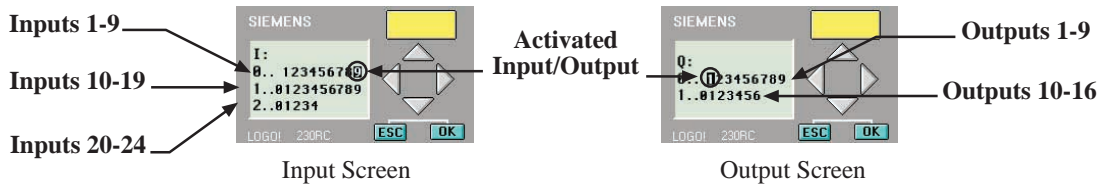

Your control panel can perform the float functions listed on the following page. Depending on the number of floats for your application, some functions may be omitted or combined.

Septic Tank High Level Alarm: This float activates the septic tank alarm light (steady) and audible alarm when lifted for longer than the high level alarm delay. The audible alarm may be silenced by pressing the illuminated PUSH TO SILENCE button on the front of the control panel. The alarm light (steady) will remain on until the float is lowered, and the audible alarm will reactivate in 12 hours if condition is not corrected.

Septic Tank Override Timer On & Off: This float activates the override timer function when lifted for more than 2 seconds. This timer function controls the pump cycles during high flow conditions. The override timer function will remain active until at least the set minimum number of override cycles have been completed and the float has lowered. When the override timer function has been completed, normal timer operation will resume.

Septic Tank Timer On & Off: This float activates the septic tank timer function when lifted. The timer will be activated while the float is up and will be deactivated 30 seconds after the float is lowered. This timer function controls the septic tank pump cycles during normal flow conditions. Note: The timer will start with its off cycle.

Septic Tank Redundant Off & Low Level Alarm: This float turns off the septic tank pump when lowered for more than 2 seconds. This float is a secondary off float which will operate if the septic tank Timer On & Off float fails. Pumping will be disabled in both the automatic and manual modes. This float also activates the septic tank alarm light (flashing) and audible alarm. The audible alarm may be silenced by pressing the illuminated PUSH TO SILENCE button on the front of the control panel. The alarm light will remain flashing until the float is raised. If the alarm condition is not corrected in 12 hours, the audible alarm will be reactivated.

Sand Filter High Level Alarm: This float activates the sand filter alarm light (steady) and audible alarm when lifted for longer than the high level alarm delay. The audible alarm may be silenced by pressing the illuminated PUSH TO SILENCE button on the front of the control panel. The alarm light (steady) will remain on until the float is lowered, and the audible alarm will reactivate in 12 hours if condition is not corrected. Note: A high level condition in the sand filter will disable the septic tank pump in automatic.

Sand Filter Pump On: This float activates the pump when lifted. The pump will run for the minimum run time or until the pump off float (if used) is lowered.

Sand Filter Pump Off: This float turns off the pump when lowered if the minimum run time has elapsed.

MVP-SSF PT RO/ Setting Inst.



Oreco Systems®
Incorporated

814 AIRWAY AVENUE
SUTHERLIN, OREGON
97479-9012

TELEPHONE:
(541) 459-4449

FACSIMILE:
(541) 459-2884


Oreco's Most Versatile Panel (MVP) line of control panels includes an easy-to-use programmable logic unit that incorporates many timing and logic functions. The unit has been programmed at the factory for the control functions required. The unit includes adjustable operational parameters and viewable monitoring information. Some operational parameters may need changing for your particular application.

The unit uses block names to identify the various parameters (please refer to the Liquid Crystal Display screen shown in Step #3). The following block types have been used with your control panel:

Block Names	Description	Factory Default	Time Range	Block Type
THLA Dly	Septic Tank High Level Alarm Delay	5 seconds	MM:SS	Timer
TOffTime	Septic Tank Timer Off Time	60 minutes	MM:SS	Timer
TOn Time	Septic Tank Timer On Time	40 seconds	MM:SS	Timer
TOVR Off	Septic Tank Override Timer Off Time	30 minutes	MM:SS	Timer
TOVR On	Septic Tank Override Timer On Time	40 seconds	MM:SS	Timer
TMinCycl	Septic Tank Minimum Override Cycles	3 cycles		Counter
FHLA Dly	Sand Filter High Level Alarm Delay	5 seconds	MM:SS	Timer
FMinRunT	Sand Filter Minimum Run Time	30 seconds	MM:SS	Timer


Timer blocks have three timebase units that can be used; s = seconds, m = minutes, h = hours. If an **h** appears after the timer setting then the time will be HH:MM (e.g. 01:55h = 1 hour and 55 minutes). If an **m** appears after the timer setting then the time will be MM:SS (e.g. 05:00m = 5 minutes and 0 seconds). If an **s** appears after the timer setting then the time will be SS.ss (e.g. 25:13s = 25.13 seconds).

All adjustable parameters DO NOT use the same type of blocks, check the block types above to determine which steps apply to your application.

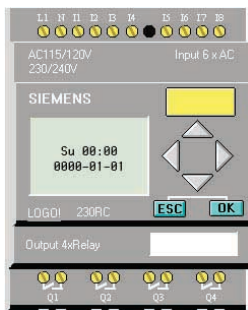

Changing Adjustable Parameter Blocks:

Step 1: Press **▼** repeatedly until the display does not change. To begin the configuration process, press the “ESC” key.

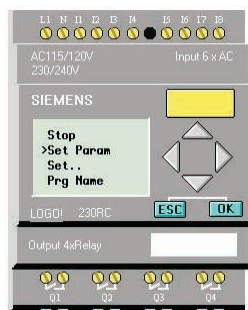


Step 2: Press **▼** on the unit to select “Set Param.” Then press the “OK” key.

Warning: Do not select “Stop.” Doing so may erase the panel programming, which can not be restored without the use of an EEPROM card, which is not included with the panel. If this is selected by accident, a confirmation screen will come up. Select “No” and press the “OK” key immediately.


Changing Adjustable Parameter Timer Blocks:

Step 3: Press \blacktriangle or \blacktriangledown to view the parameter values. In this example, “Off Time” is being viewed.

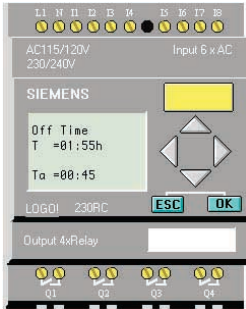


Step 4: The first line indicates the set value for the parameter. In this example, the set time is 1 hour and 55 minutes, “T=01:55h.” To change the set value for the parameter, press the “OK” key.


The second line indicates, in real time, how much time has elapsed for the cycle that is currently in process. The current value of the parameter is 45 minutes, “Ta=00:45.”

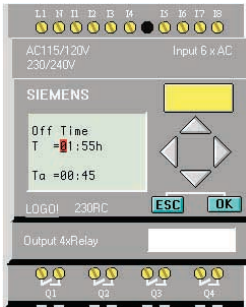


Step 5: The cursor will appear in the set value. To select the digit to be changed, press \blacktriangleleft or \blacktriangleright . To change the value of a digit, press \blacktriangle or \blacktriangledown . In this example, the set value has been changed from 1 hour and 55 minutes to 58 minutes and 15 seconds. (The timebase can be changed from hours = h to minutes = m or seconds = s by moving the cursor to the far right and pressing \blacktriangle or \blacktriangledown).

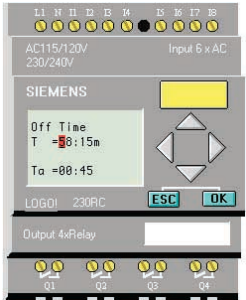

Step 6: When the desired time value has been entered, press the “OK” key. The new time value will now be in effect.

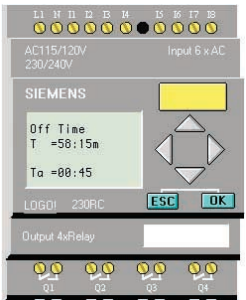

Step 7: To exit parameter mode, press the “ESC” key twice.

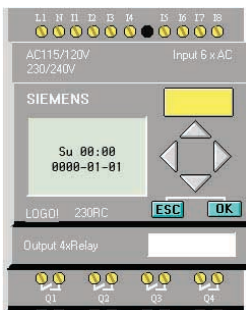

Changing Adjustable Parameter Counter Blocks:

Step 3: Press \blacktriangle or \blacktriangledown to view the parameter values. In this example, “MinOCycl” is being viewed.



Step 4: The first line indicates the on threshold for the parameter. In this example, the “MinOCycl” is 3, “On = 3.” To change the set value for the parameter, press the “OK” key.

The second line indicates the off threshold. This value must be set to zero, “Off = 0.”


The third line indicates, in real time, how many counts have occurred for this process. The current value of the parameter is 2, “Cnt = 2.”




Step 5: The cursor will appear in the set value. To select the digit to be changed, press \blacktriangleleft or \blacktriangleright . To change the value of a digit, press \blacktriangle or \blacktriangledown . In this example, the set value has been changed from 3 to 2.



Step 6: When the desired counter value has been entered, press the “OK” key. The new value will now be in effect.

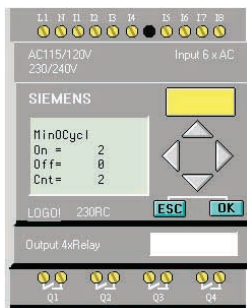

Step 7: To exit parameter mode, press the “ESC” key twice.

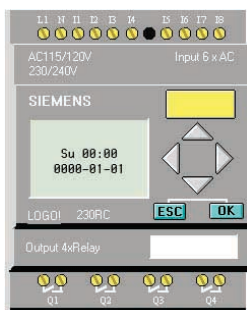

MVP - Control Panel Instructions

Contrast Adjustment and Time & Date Settings



Oreco Systems®
Incorporated

814 AIRWAY AVENUE
SUTHERLIN, OREGON
97479-9012

TELEPHONE:
(541) 459-4449


FACSIMILE:
(541) 459-2884

Oreco's Most Versatile Panel (MVP) line of control panels includes an easy-to-use programmable logic unit that incorporates many timing and logic functions. The readability of the display may vary with temperature and ambient light. If the screen is difficult to read, adjusting the contrast is recommended. Instructions for adjusting the contrast are shown below. Setting the date and time is typically not necessary. However, if required, the time and date can be set by following instructions shown below.

To adjust the settings, use the four arrow keys located on the face of the unit (up, down, left, and right), along with the "ESC" key and the "OK" key. Follow the steps, below:


Changing Settings:

Step 1: Press **▼** repeatedly until the display does not change. To begin the configuration process, press the "ESC" key.

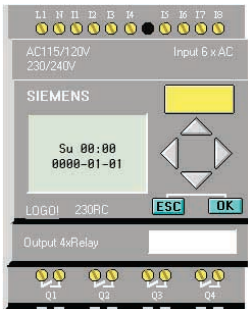

Step 2: Select "Set..." (Press **▲** or **▼**), and then press the "OK" key.


Warning: Do not select "Stop". Doing so may erase the panel programming, which can not be restored without the use of an EEPROM card, which is not included with the panel. If this is selected by accident, a confirmation screen will come up. Select "No" and press the "OK" key immediately.

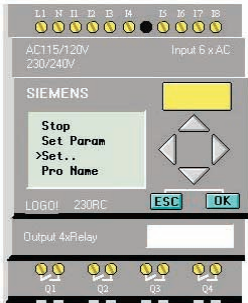


If adjusting contrast, continue with the steps below. If adjusting time & date, skip to "Setting Time and Date:" on next page.


Adjusting Contrast:

Step 3: Select "Contrast" (Press **▲** or **▼**), and then press the "OK" key.

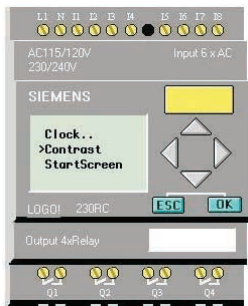


Step 4: Select the desired contrast (Press **◀** or **▶**), and then press the "OK" key.

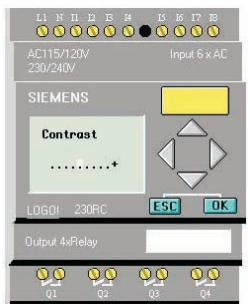

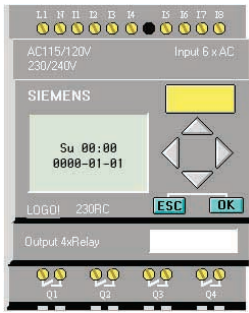


Step 5: To exit, press the “ESC” key once.


Setting Time and Date:

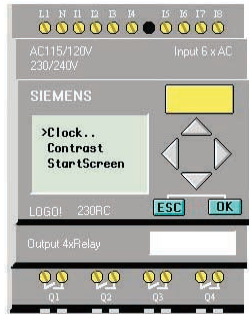

Step 3: Select “Clock...” (Press ▲ or ▼), and then press the “OK” key.

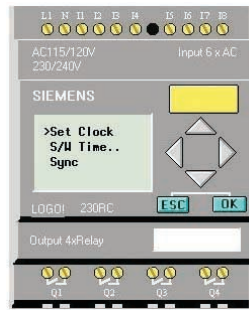


Step 4: Select “Set Clock” (Press ▲ or ▼), and then press the “OK” key.

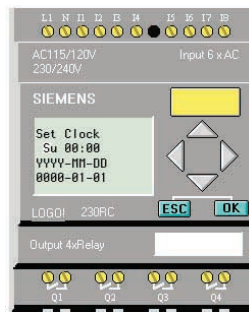

Step 5: Move the cursor to the desired position by pressing ◀ or ▶.

Step 6: Change the value by pressing ▲ or ▼.

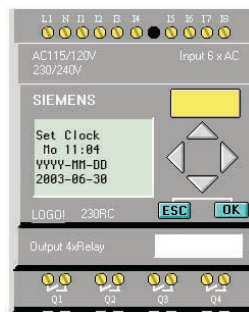

Step 7: To confirm your entries press the “OK” key once. Then, press the “ESC” key twice.

MVP-SSF PT RO/ Reference Chart

Program Code: SS103-50

Input Functions:

1. Septic Tank RO & Low Level Alarm Float
2. Septic Tank Timer On & Off Float
3. Septic Tank Override Timer On & Off Float
4. Septic High Level Alarm
5. Sand Filter Pump Off Float
6. Sand Filter Pump On Float
7. Sand Filter High Level Alarm Float
8. Push To Silence

Conditions for activation:

- Float in up position
- Float in up position
- Float in up position
- Float in up position
- Float in up position
- Float in up position
- Float in up position
- Pushbutton is pressed

Output Functions:

1. Septic Tank Pump
2. Septic Level Alarm Light
3. Sand filter Pump
4. Audible Alarm

Condition for activation:

- Septic Pump is activated
- Alarm Light is activated
- Sand Pump is activated
- Audible Alarm is activated

Built In Screens:

Built in screens are: time & date, digital inputs, digital outputs, analog inputs, analog outputs, memory flag, and ESC+cursor key status. To view these screens, press the down arrow repeatedly until a built in screen appears, then use the left and right arrow keys to change between screens.

System Data Screens:

To change between screens, press the up and down arrow keys. The following screens have been used with your panel.

Screens:

1. T Pump CT & ETM
2. F Pump CT & ETM
3. T HLA CT & OVR CT
4. T LLA CT & T TimrFlt CT
5. F HLA CT
6. Power Faults & Operating Hr

Description:

- Septic tank pump cycle counter on top and pump run time in minutes below
- Sand filter pump cycle counter on top and pump run time in minutes below
- Septic tank high level alarm counter on top and override cycle counter below
- Septic tank low level alarm counter on top and timer float counter below
- Sand filter high level alarm counter
- Power fault counter on top and operating hours below

Selecting Blocks for Viewing or Adjusting:

To begin to adjust parameters, press 'ESC'.

Block Names:	Description:	Time Range:
THLA Dly	Septic Tank High Level Alarm Delay	MM:SS
TOffTime	Septic Tank Timer Off Time	MM:SS
TOn Time	Septic Tank Timer On Time	MM:SS
TOVR Off	Septic Tank Override Timer Off Time	MM:SS
TOVR On	Septic Tank Override Timer On Time	MM:SS
TMinCycl	Septic Tank Minimum Override Cycles	
FHLA Dly	Sand Filter High Level Alarm Delay	MM:SS
FMinRunT	Sand Filter Minimum Run Time	MM:SS

EIN-CP-REF-5
Rev 6.0 © 08/10/05

MVP-SSF PT RO/ Reference Chart

Program Code: SS103-50

Input Functions:

1. Septic Tank RO & Low Level Alarm Float
2. Septic Tank Timer On & Off Float
3. Septic Tank Override Timer On & Off Float
4. Septic High Level Alarm
5. Sand Filter Pump Off Float
6. Sand Filter Pump On Float
7. Sand Filter High Level Alarm Float
8. Push To Silence

Conditions for activation:

- Float in up position
- Float in up position
- Float in up position
- Float in up position
- Float in up position
- Float in up position
- Float in up position
- Pushbutton is pressed

Output Functions:

1. Septic Tank Pump
2. Septic Level Alarm Light
3. Sand filter Pump
4. Audible Alarm

Condition for activation:

- Septic Pump is activated
- Alarm Light is activated
- Sand Pump is activated
- Audible Alarm is activated

Built In Screens:

Built in screens are: time & date, digital inputs, digital outputs, analog inputs, analog outputs, memory flag, and ESC+cursor key status. To view these screens, press the down arrow repeatedly until a built in screen appears, then use the left and right arrow keys to change between screens.

System Data Screens:

To change between screens, press the up and down arrow keys. The following screens have been used with your panel.

Screens:

1. T Pump CT & ETM
2. F Pump CT & ETM
3. T HLA CT & OVR CT
4. T LLA CT & T TimrFlt CT
5. F HLA CT
6. Power Faults & Operating Hr

Description:

- Septic tank pump cycle counter on top and pump run time in minutes below
- Sand filter pump cycle counter on top and pump run time in minutes below
- Septic tank high level alarm counter on top and override cycle counter below
- Septic tank low level alarm counter on top and timer float counter below
- Sand filter high level alarm counter
- Power fault counter on top and operating hours below

Selecting Blocks for Viewing or Adjusting:

To begin to adjust parameters, press 'ESC'.

Block Names:	Description:	Time Range:
THLA Dly	Septic Tank High Level Alarm Delay	MM:SS
TOffTime	Septic Tank Timer Off Time	MM:SS
TOn Time	Septic Tank Timer On Time	MM:SS
TOVR Off	Septic Tank Override Timer Off Time	MM:SS
TOVR On	Septic Tank Override Timer On Time	MM:SS
TMinCycl	Septic Tank Minimum Override Cycles	
FHLA Dly	Sand Filter High Level Alarm Delay	MM:SS
FMinRunT	Sand Filter Minimum Run Time	MM:SS

EIN-CP-REF-5
Rev 6.0 © 08/10/05